



Small Message Center Two Sided


For Fastener Pack
(FP-SMC-2S1P-CU-01)

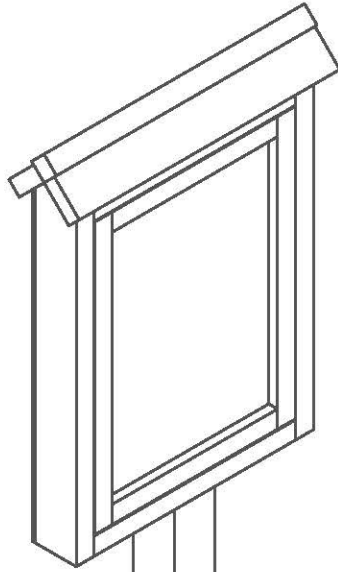

Before assembly, please make sure all components are included.

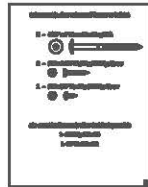

**(1) - One Fastener Pack
FP-SMC-2S1P-CU-01**

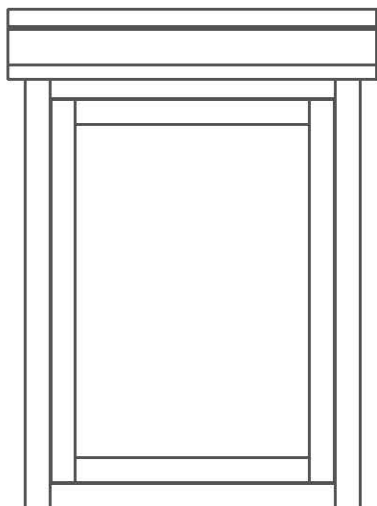


**(1) - One Message Center
MSA-SMC-2S1P-01**

**(1) - One Post
MP-SMP-A-01**




Before assembly, please make sure all fasteners are included.

2 - 3/8" x 3" Hex Head Lag Bolt

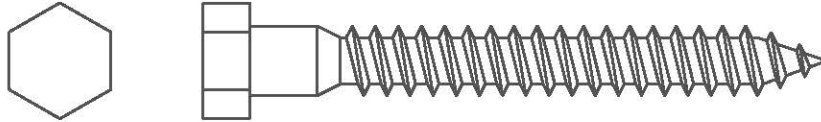


2 - 3/8" Flat Washer

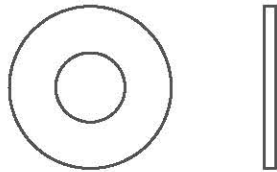

Also needed for this assembly will be the following materials:

1 - 9/16" Socket Wrench

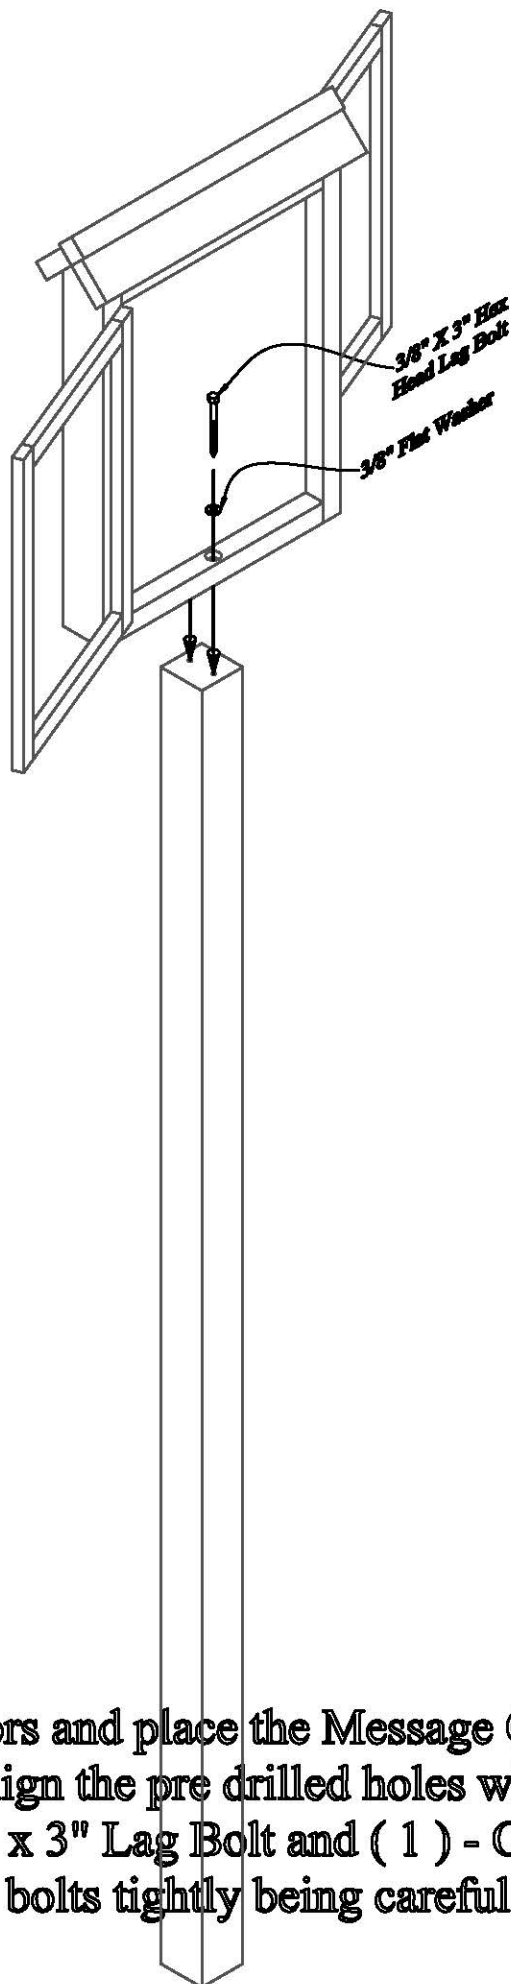

Step #1:

Open the access doors and place the Message Center on top of the Post being sure to align the pre drilled holes with the pilot holes. Place (1) - One 3/8" x 3" Lag Bolt and (1) - One 3/8" Flat Washer per hole. Secure the bolts tightly being careful not to over tighten the bolts.