



T32P Planter box


For Fastener Pack
(FS-T32P-CAP-01)

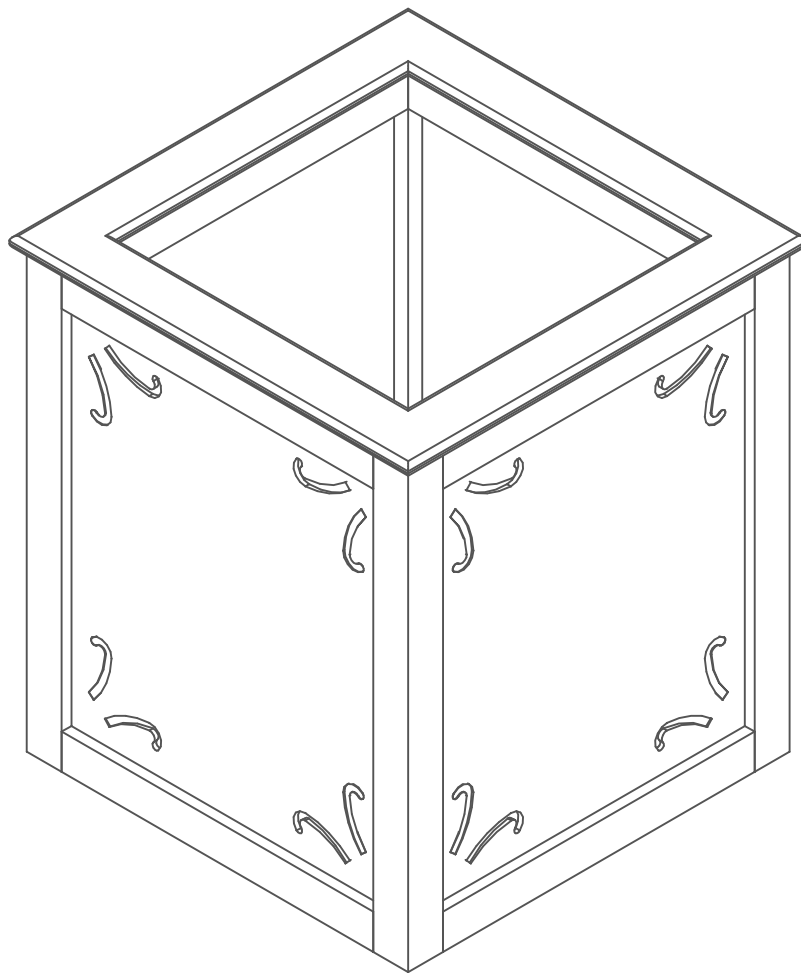


Before assembly, please make sure all components are included.

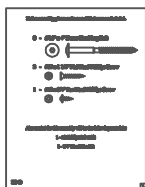


(1) One Fastener Pack
FS-T32P-CAP-01

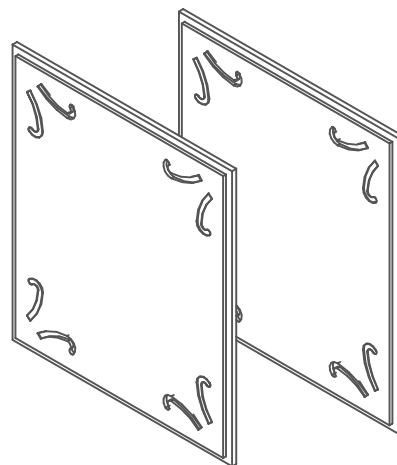


(2) RP-T32P-C-01

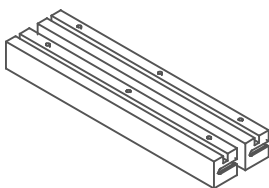


(2) RP-T32-B-01

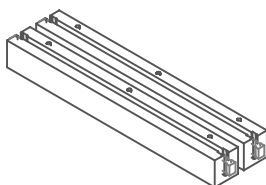


(2) RP-T32-A-01

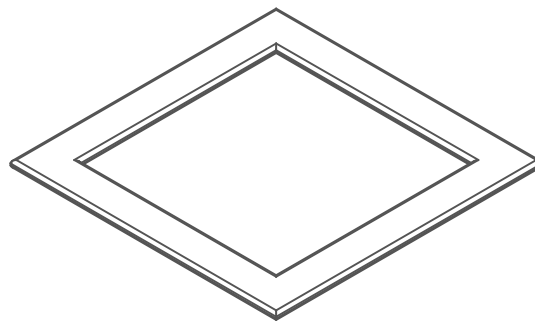

(1) RP-T32P-E-01

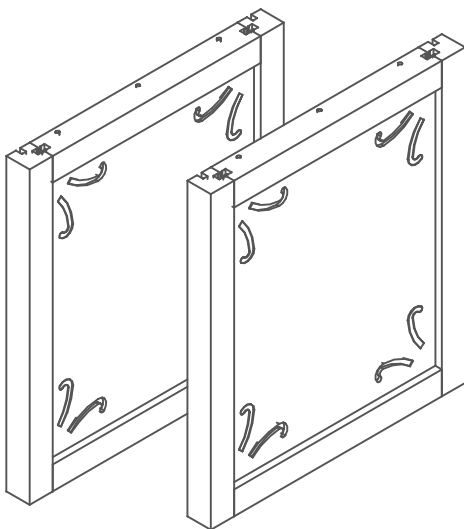

(2) SBA-T32P-A-01

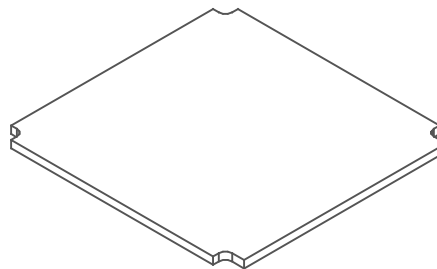


(1) RP-T32-D-01

Before assembly, please make sure all fasteners are included.

24 - #12 x 2 1/2" Flat Head Phillips Screw




*If the fastener is a little tight or you are having a hard time getting them to slide together, use a hammer and screw driver to lightly tap the fastener in to place

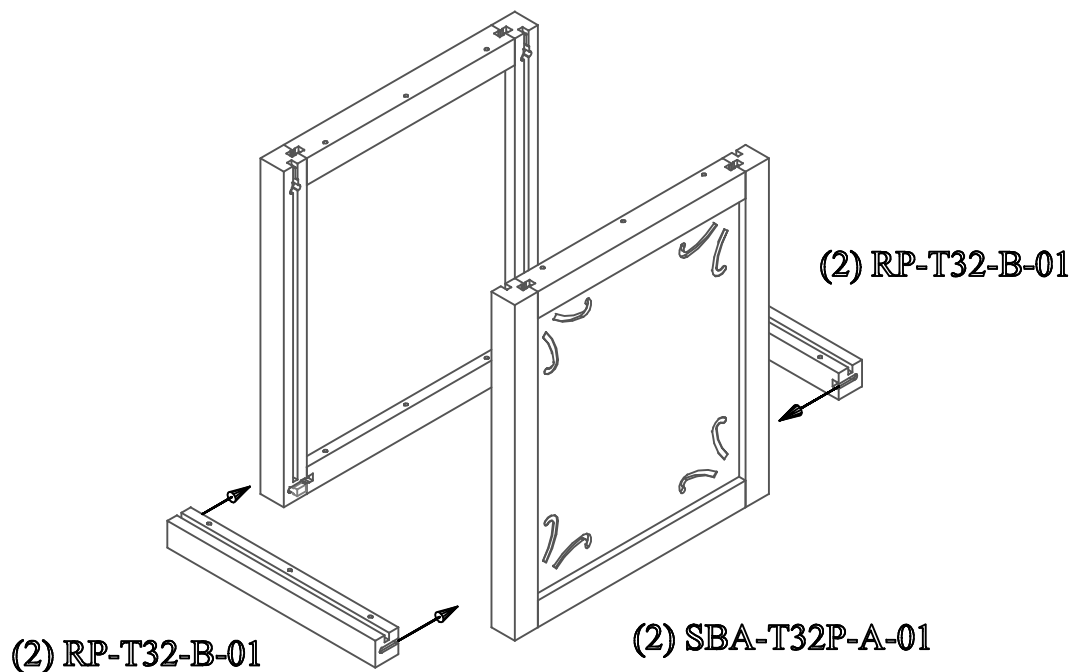


Step #1:

Take 2 "*SBA-T32P-A-01*" and stand them up with design on the panels facing away from each other. Take 1 "*RP-T32-B-01*" and slide it on to one "*SBA-T32-A-01*" and then on to the second one. Repeat on the other side with the second "*RP-T32-B-01*".

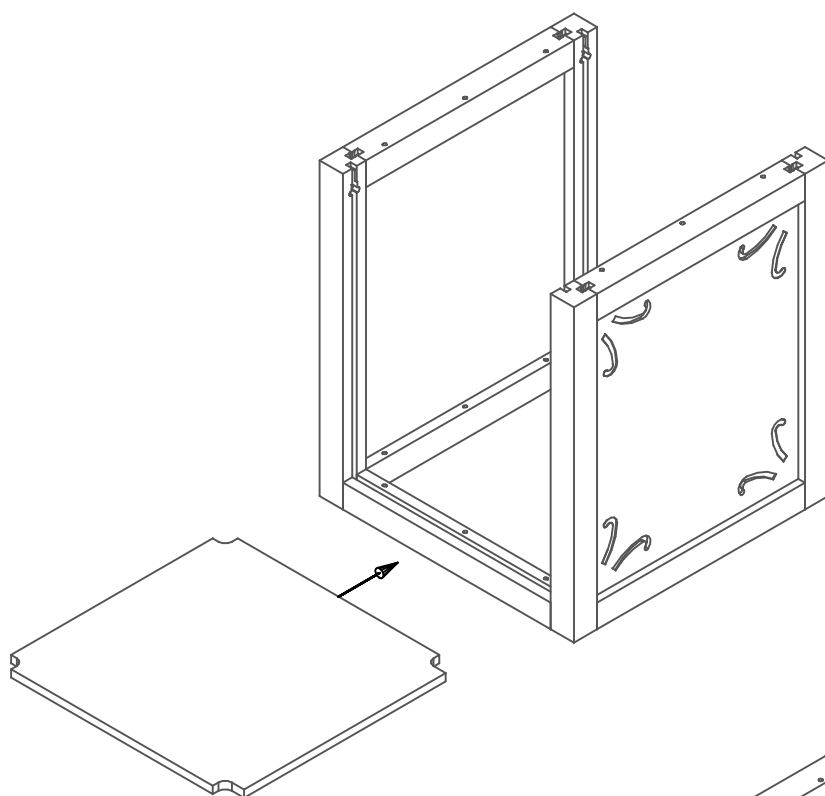


(1) RP-T32-D-01

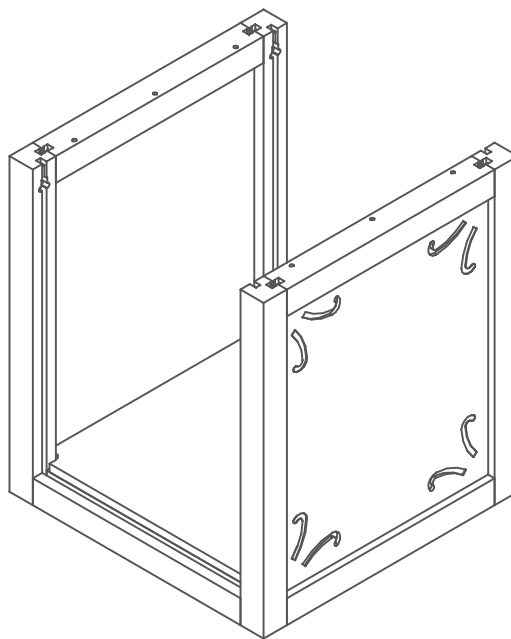

Step #2:

Take part "*RP-T32-D-01*" and place on the inside of planter box. It will be fastened in a later process.


(2) RP-T32-C-01

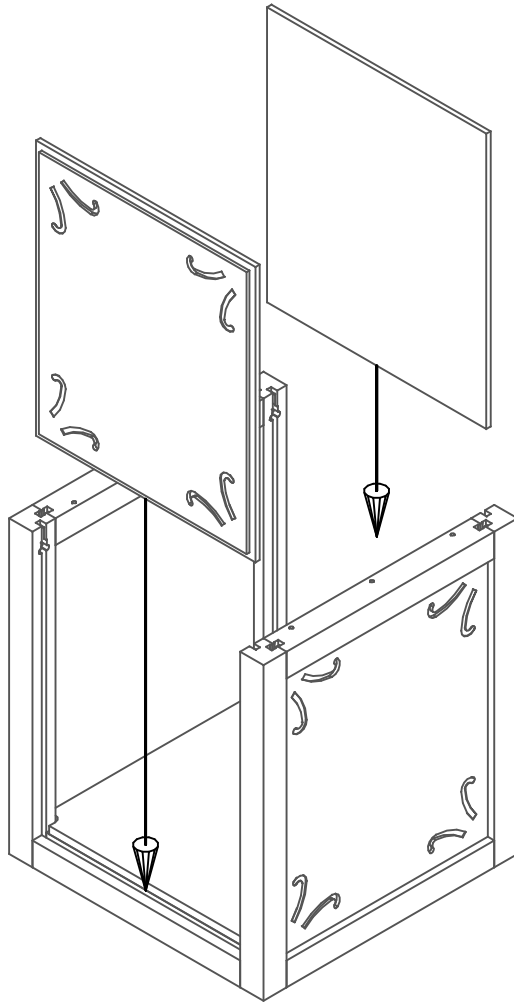

Step #3:

Take "*RP-T32P-C-01*" Panel, and slide them in to the groves of the planter box with the design on the panel facing out ward, away from each other.


*If the fastener is a little tight or you are having a hard time getting them to slide together, use a hammer and screw driver to lightly tap the fastener in to place

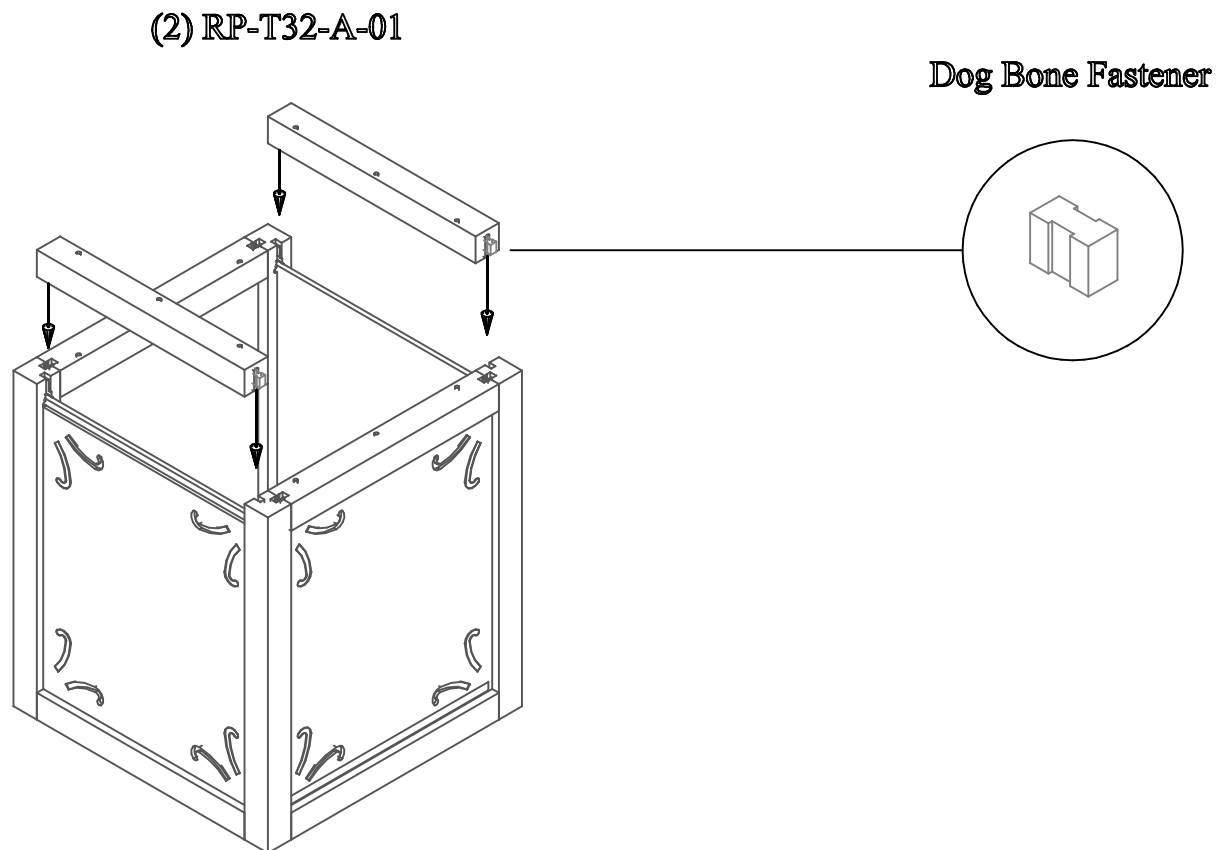

Step #4:


Take 1 "RP-T32-A-01" with "Dog Bone" fastener attached, and slide into slots of "SBA-T32P-A-01" while sliding over the panel. Repeat to the other side.

(1) RP-T32P-E-01

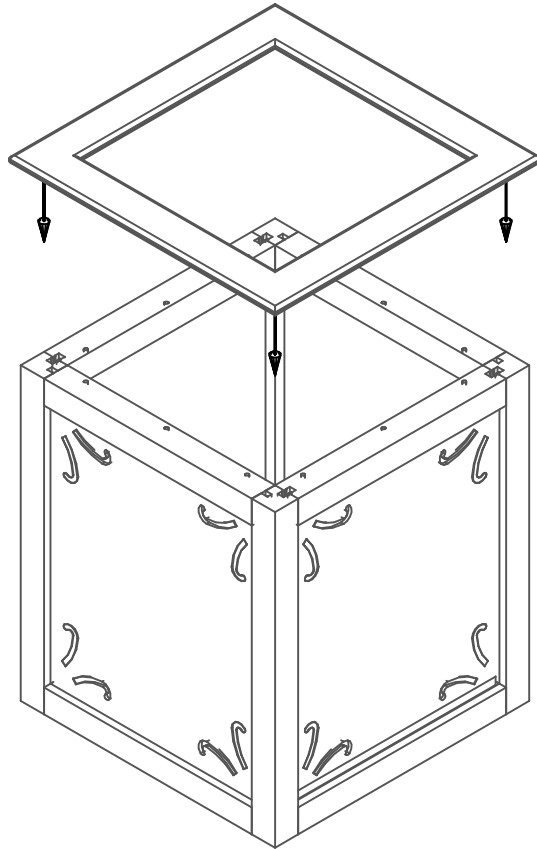


Step #5:

Take "*RP-T32P-E-01*" and set it down on top and center it to the best you can.

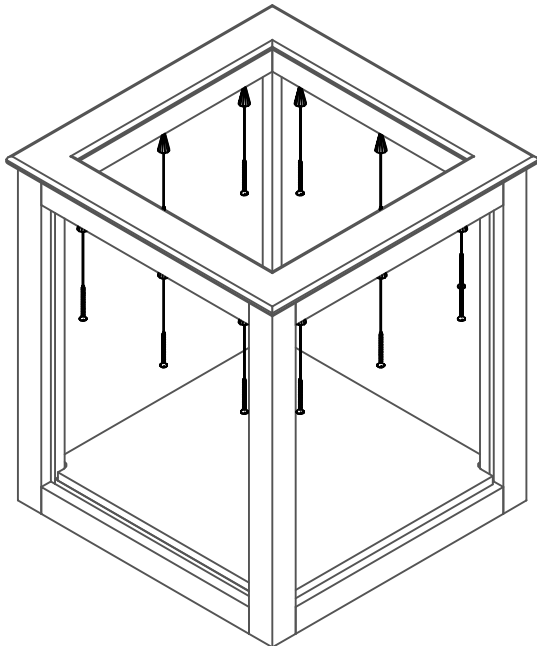

View has been
altered for your
convenience


View has been
rotated, altered for
your convenience

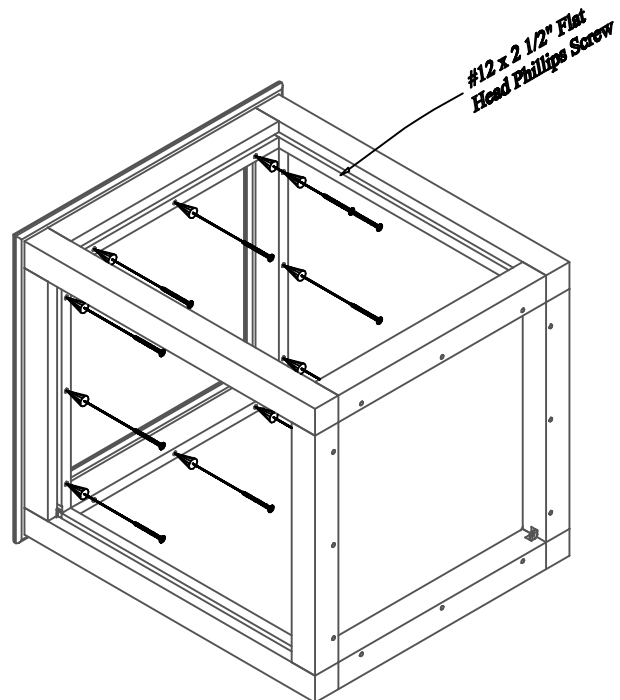


Step #6:

With the RP-T32P-E-01 carefully lined up (pre-drilled pilot holes lined up with the drilled holes in the 2" x 2" boards), put 12 #12 x 2 1/2" *Flat Head Phillips Screws* in each hole. If having trouble lining up the holes, lift slightly up on RP-T32P-E-01 while putting the screw through the pre-drilled holes to line it up.

*Careful not to over tighten, that will cause a striped hole.



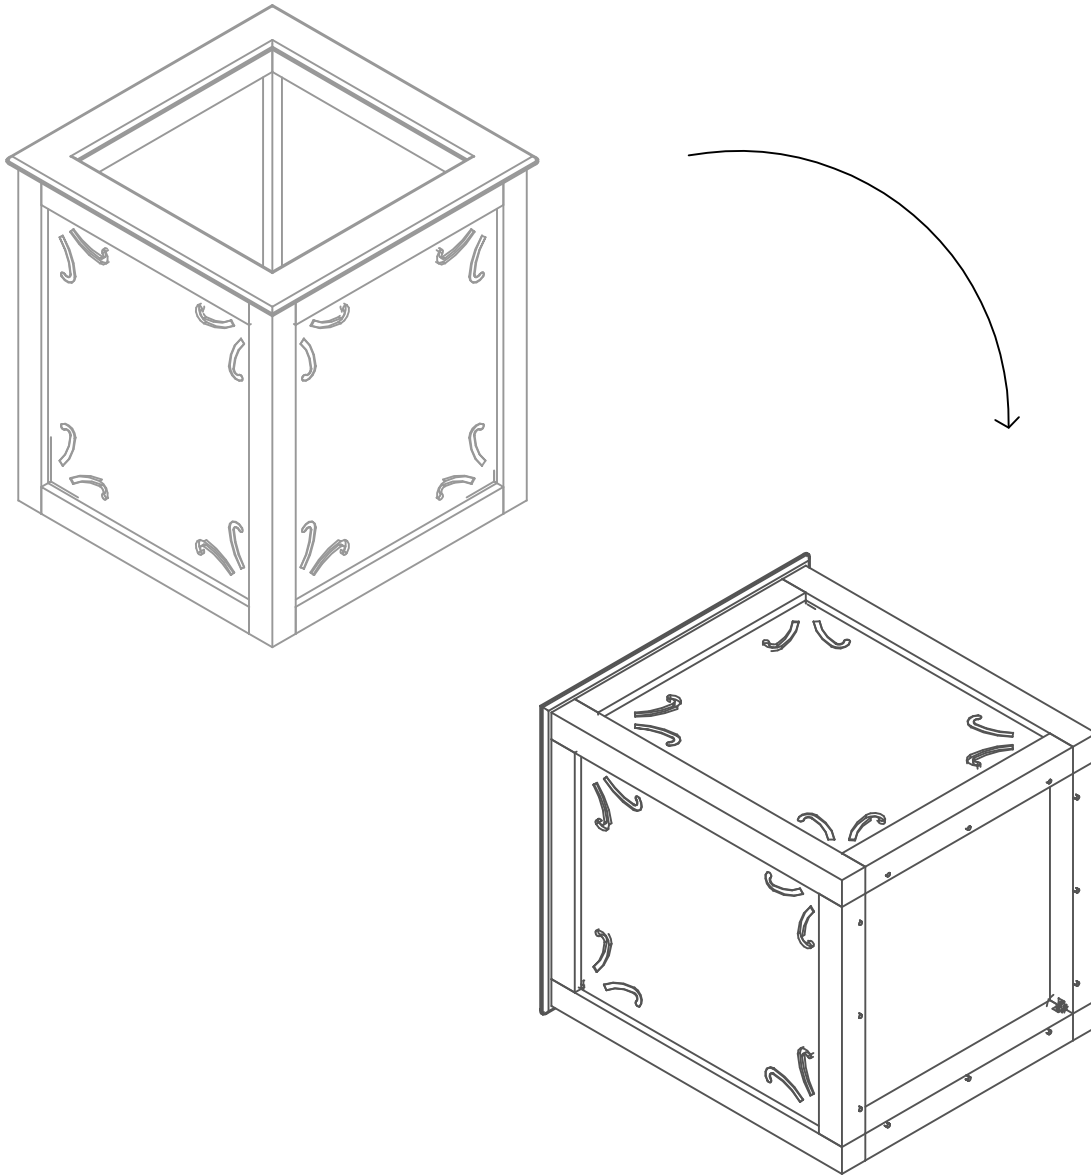


Step #7:
Rotate the planter box on to its back gently.

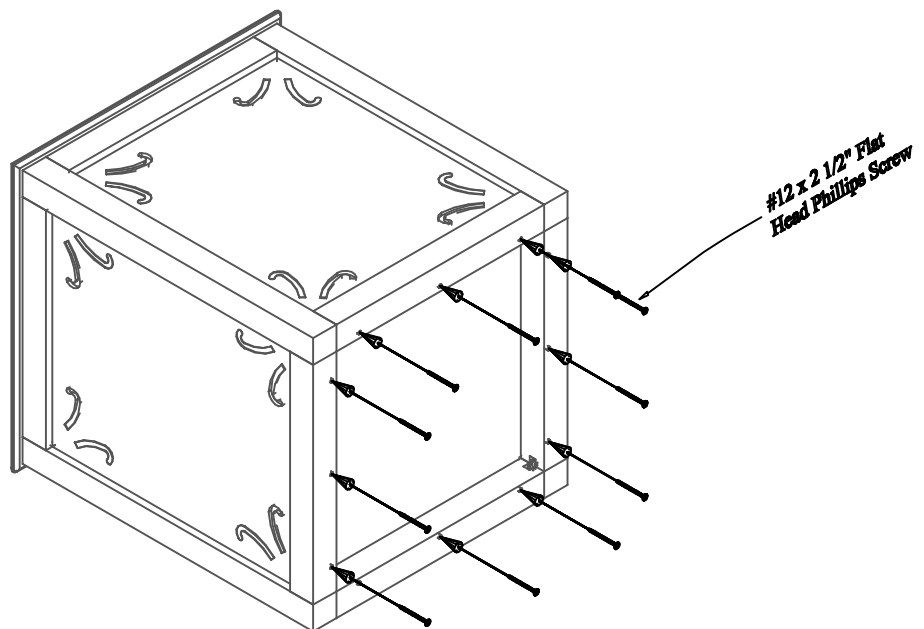

Step #8:

Align pre-drilled holes with "RP-T32-D-01" pilot holes, put *12 #12 x 2 1/2" Flat Head Phillips Screws* in each of the holes.

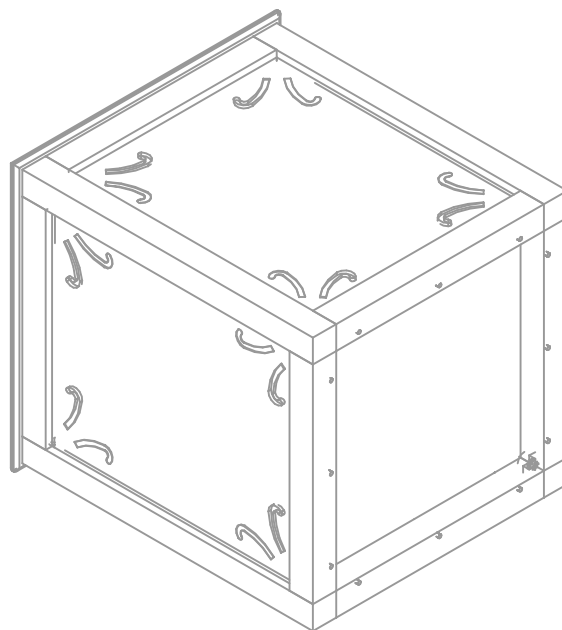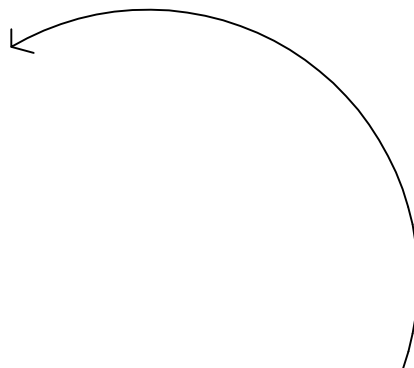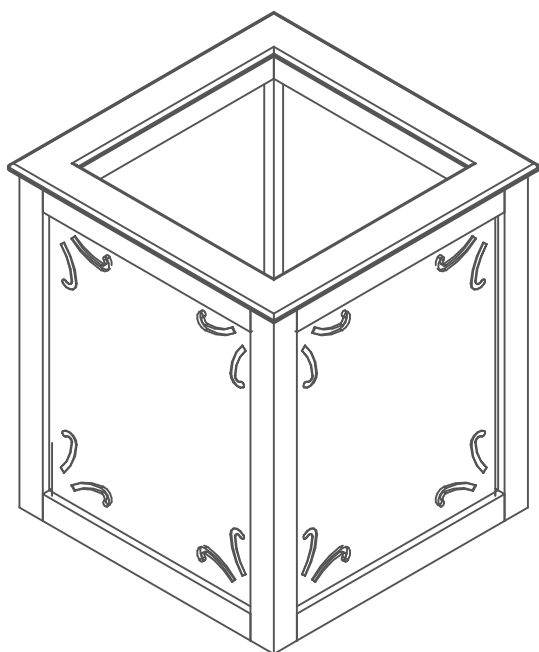

Step #9:

Rotate planter box back to the standing position and Your planter box is complete.