



A

B


C

D

Assembly Instructions


Step 1

Attach the 6' Top to the 349 Top Legs using specified hardware.

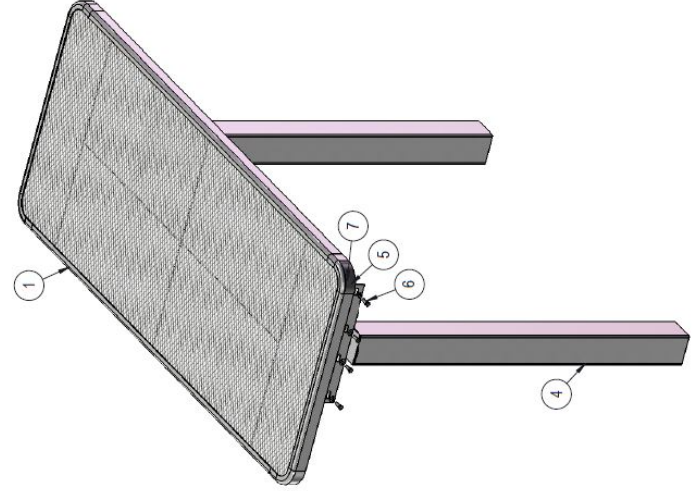

Step 2

Attach the 6' Seats to the 349 Seat Legs using specified hardware.

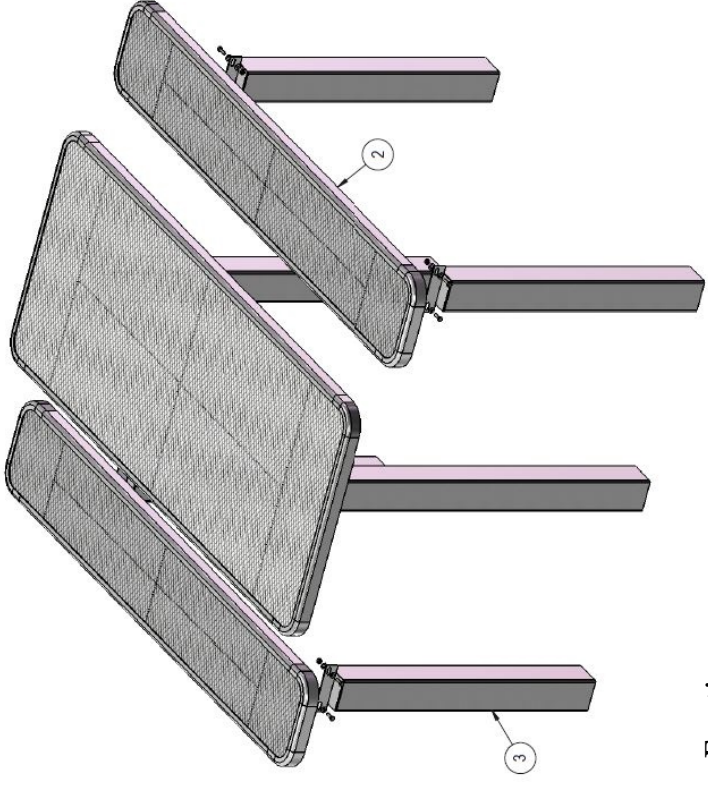

Footings

Estimated Required Concrete:
19 - 50 lb Bags of Concrete Mix

