



D

Step 1: Attach the 6' Diamond Pattern Seat to the 942 Legs using specified hardware as shown.

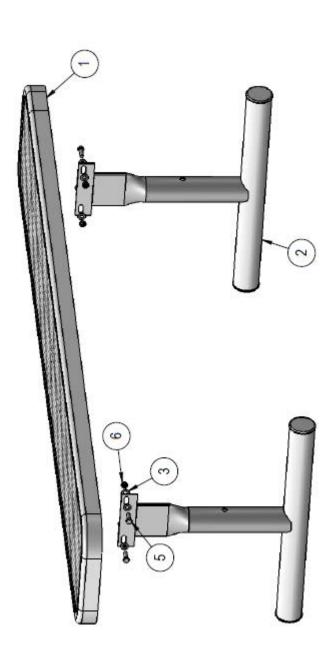

Step 2: Attach the 26-3/4" braces to the 942 legs using the specified hardware as shown.

仐

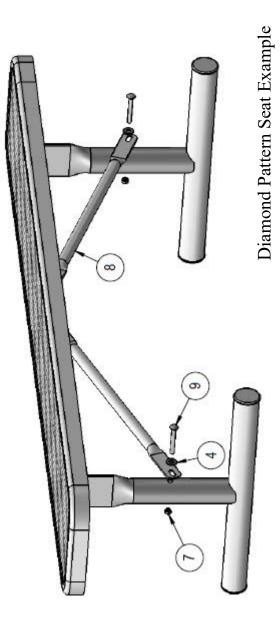

Page 2 of 2 OCC Outdoors Products PH: 1-800-821-7670 EMAIL - occontact@occoutdoors.com Fax: 1-317-862-9422


Part #: OCC-942P-V6



D

C

В

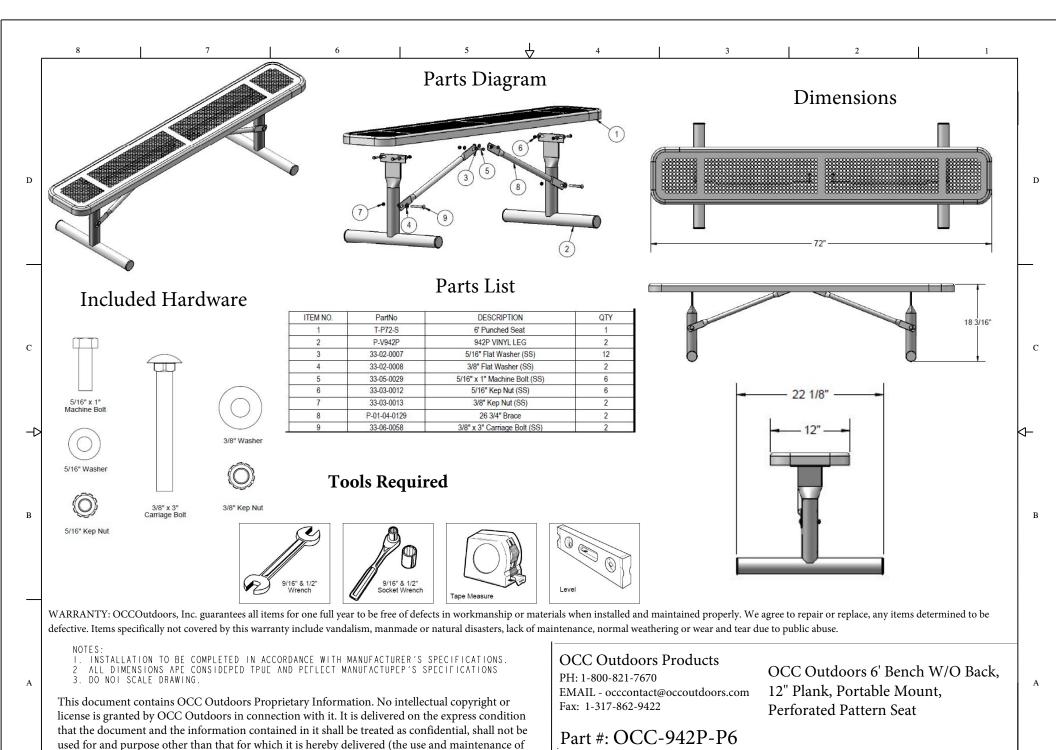

8 7 6 5 4 3 2

Date: 12/08/2015

Page 1 of 2


the product supplied). It shall not be disclosed in whole or part to third parties and shall not be

duplicated in any manner without OCC Outdoors's prior approval.

Assembly Instructions


D

Attach the 6' Punched Seat to the 942 Legs using specified hardware.

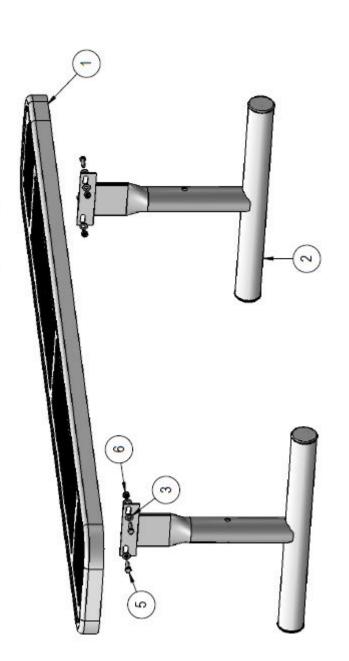

Attach the 26-3/4" Braces to the 942 Legs using specified hardware as shown.


仐

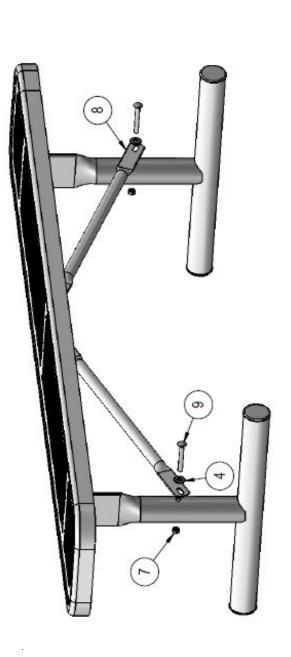

3

Page 2 of 2 OCC Outdoors Products PH: 1-800-821-7670 EMAIL - occontact@occoutdoors.com

Fax: 1-317-862-9422 Part #: OCC-942P-P6

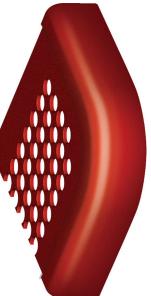

D

C

Perforated Pattern Seat Example