


8 7 6 5 4 3 2

Assembly Instructions


D

Attach the 8' Expanded Deluxe Seat to the 942 Legs Using Specified Hardware

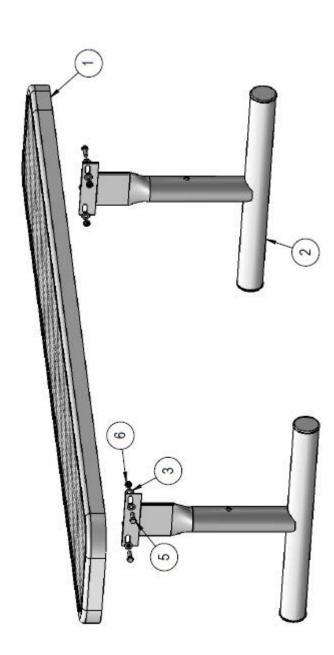

Step 2: Attach the 26-3/4" braces to the 942 legs using the specified hardware as shown.

仐

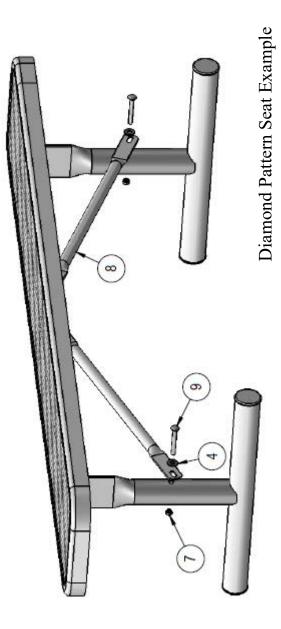

Page 2 of 2 OCC Outdoors Products PH: 1-800-821-7670 EMAIL - occcontact@occoutdoors.com


Fax: 1-317-862-9422

Part #: OCC-942P-DV8



D

C

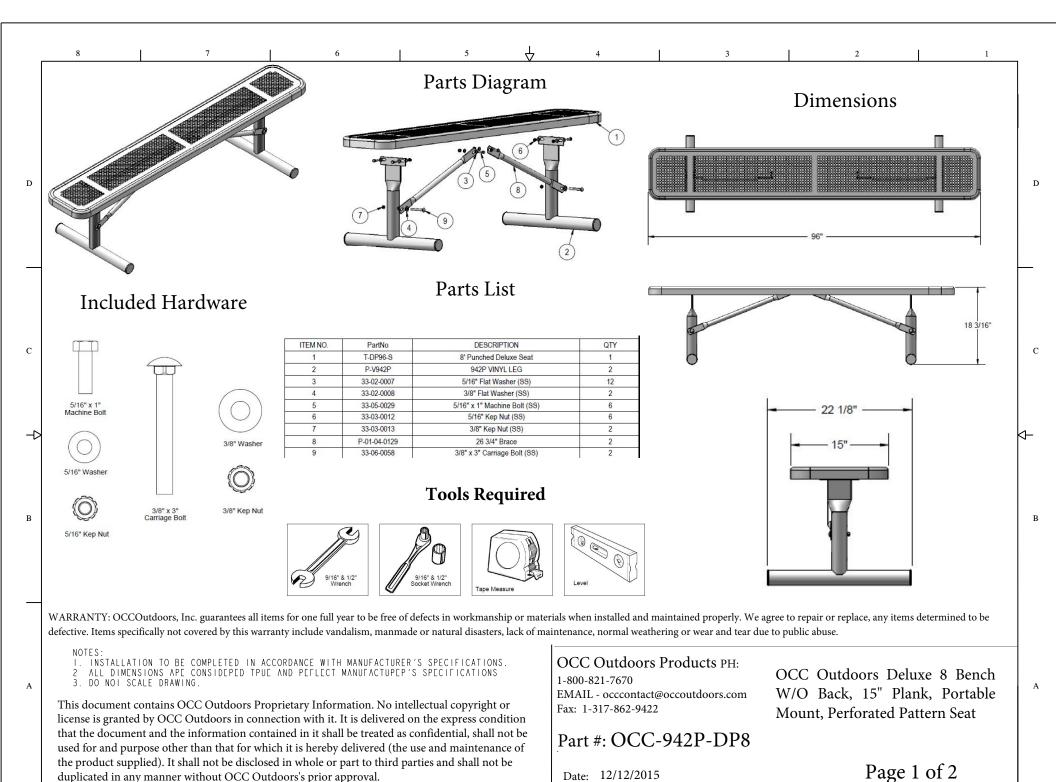


7 6 5 4 3

Assembly Instructions


D

Attach the 8' Punched Deluxe Seat to the 942 Legs using specified hardware.

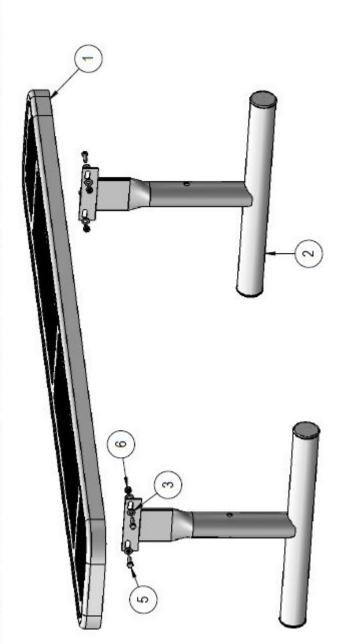

Attach the 26-3/4" Braces to the 942 Legs using specified hardware as shown.

仐

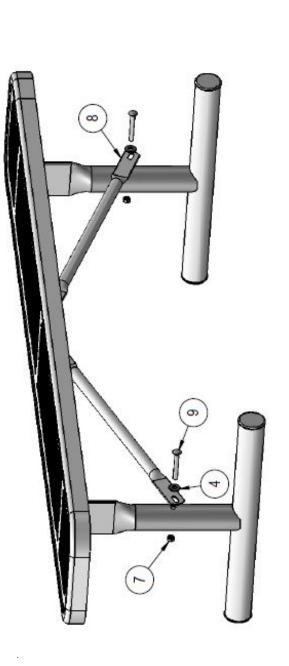


Page 2 of 2 OCC Outdoors Products PH: 1-800-821-7670

Perforated Pattern Seat Example

EMAIL - occontact@occoutdoors.com

Fax: 1-317-862-9422

Part #: OCC-942P-DP8

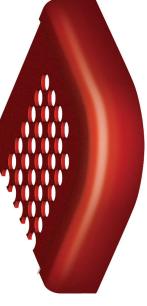

D

C