


duplicated in any manner without OCC Outdoors's prior approval.

Date: 11/25/2015


Assembly Instructions

Step 1: Attach the 10' Diamond Pattern Seat to the 942 Legs using specified hardware as shown.

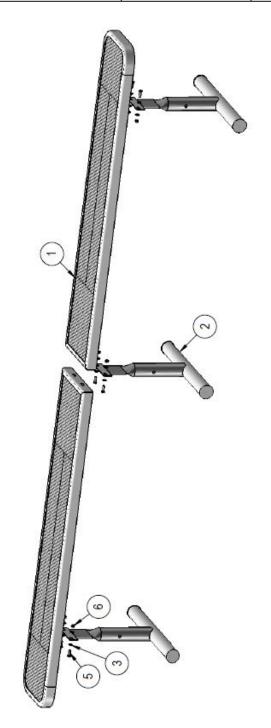

Step 2: Attach the 26-3/4" braces to the 942 legs using the specified hardware as shown.

子

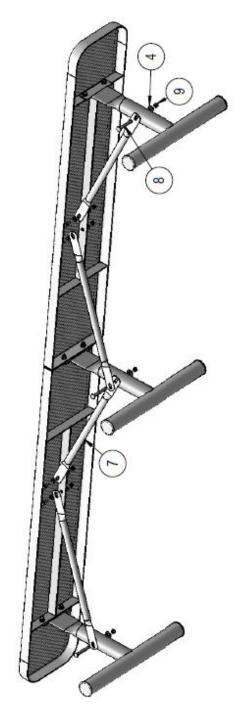

3

Diamond Pattern Seat Example

Page 2 of 2 OCC Outdoors Products PH: 1-800-821-7670 EMAIL - occcontact@occoutdoors.com


Fax: 1-317-862-9422


Part #: OCC-942P-V15




C

D

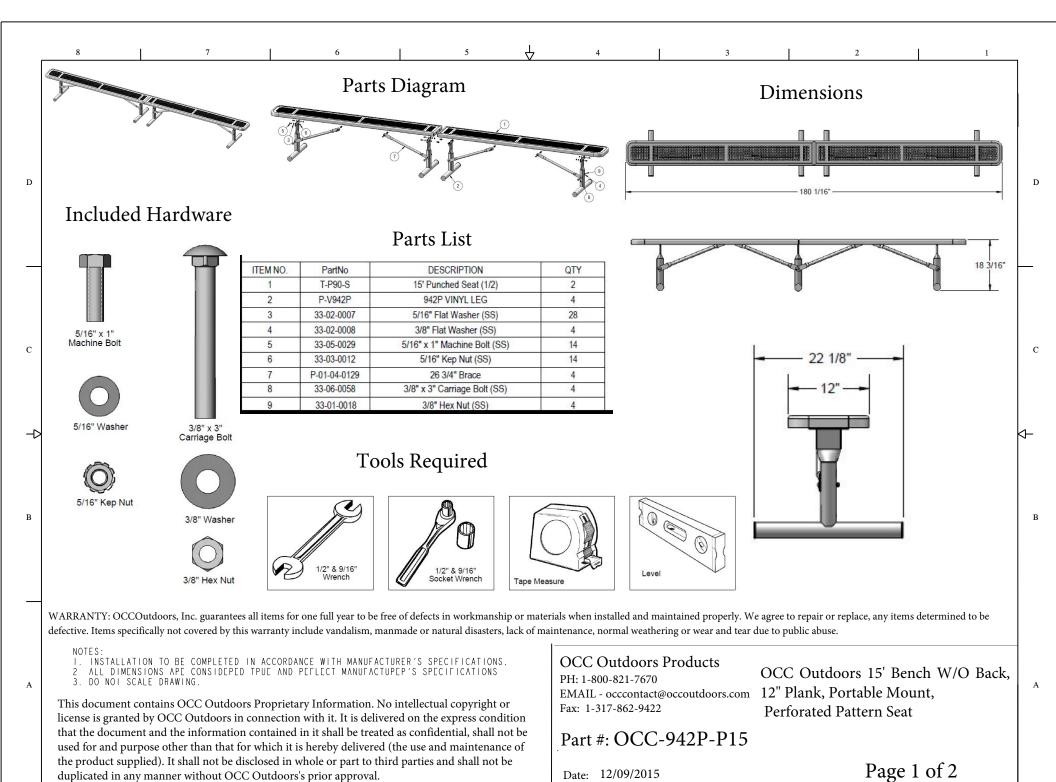




Attach the 15' Seat to the 942 Legs as shown using specified hardware.

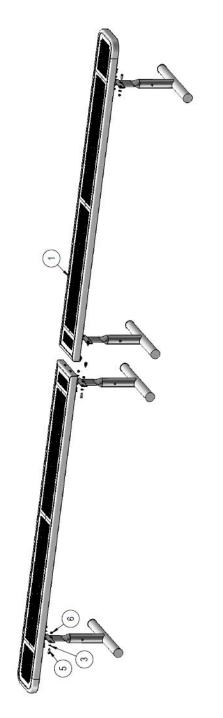

Attach the 26-3/4" Braces to the Seats and Legs as shown using specified hardware.

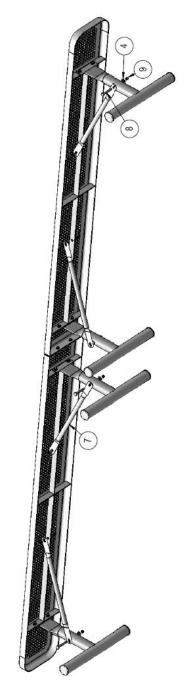


仐

4

3

PerforatedPattern Seat Example

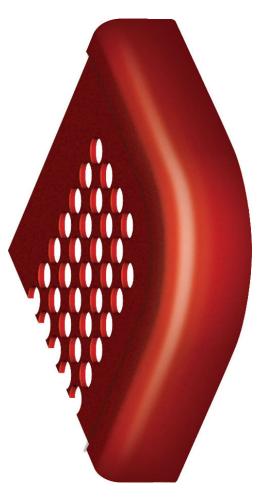

Page 2 of 2 OCC Outdoors Products PH: 1-800-821-7670 EMAIL - occcontact@occoutdoors.com Fax: 1-317-862-9422

D

 \mathbf{C}

В

Part #: OCC-942P-P15