
# Bistro Picnic Table For Fastener Pack (FP-BST-CU-01)

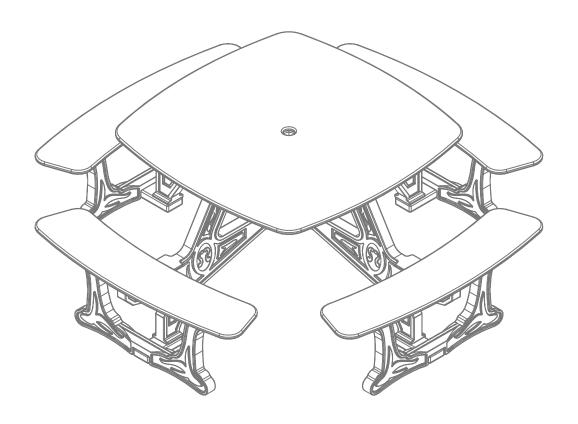


Congratulations!!


You have just purchased the finest recycled plastic picnic table available. Enjoy!!!

Before assembly, please make sure all components are included.

### J - Table Top

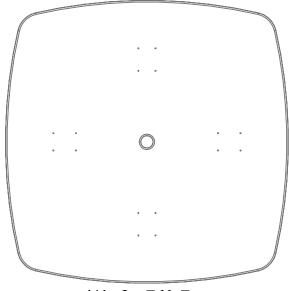

(1) - One Table Top GSP-BST-A-01

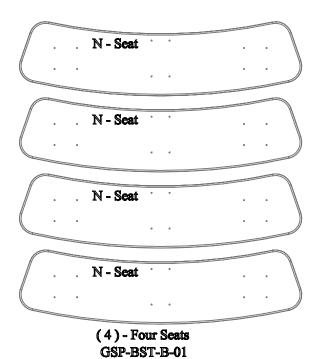


R - Table Center
R - Table Center


(2) - Two Table Centers PS-GSCS-A-01



FP - Fastener Pack

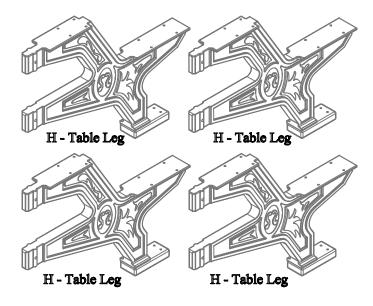

(4) - Four Table Legs GSSA-CMTS-A-01

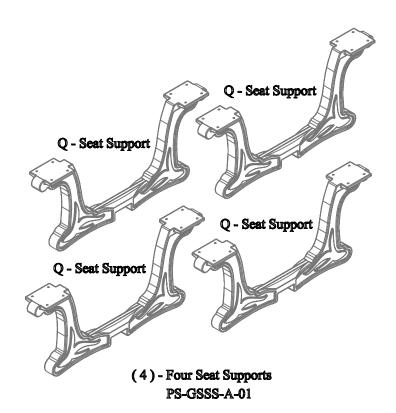


Before assembly, please make sure all fasteners are included.

8 - 3/8" x 4 1/2" Hex Head Bolt



16 - 3/8" Flat Washer

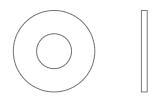

8 - 3/8" Nylon Lock Nut



8 - #12 x 3" Flat Head Phillips Screw




64 - #12 x 1" Pan Head Phillips Screw



Also needed for this assembly will be the following materials:

- 1 #3 Phillips Drive Bit
- 2 9/16" Socket Wrench

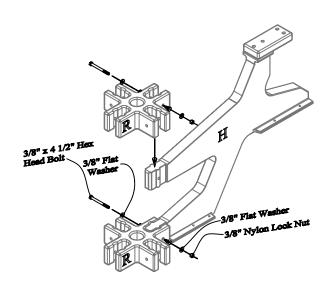


Step #1:

secure.

Slide (1) One Table Center onto each end of the Table Leg as shown above. Use (1) One 3/8" x 4 1/2" Hex Head Bolt and (1) One 3/8" Flat Washer along with (1) One 3/8" Flat Washer and (1) One 3/8" Nylon Lock Nut per hole to


Do not tighten bolts completely. This will be done in a later step.

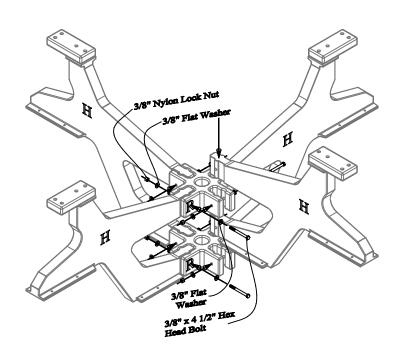

# Step #2:

Slide the remaining (3) Three Table Legs in to the Table Centers. Use (1) One 3/8" x 4 1/2" Hex Head Bolt and (1) One 3/8" Flat Washer along with (1) One 3/8" Flat Washer and (1) One 3/8" Nylon Lock Nut per hole to secure.


Do not tighten bolts completely. This will be done in a later step.

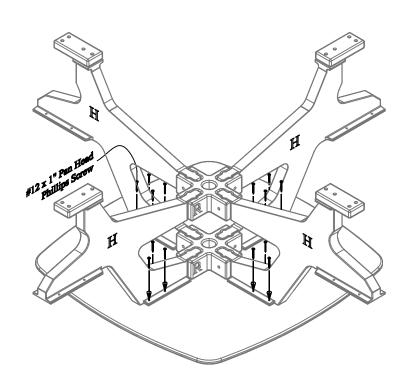

## Step #3:

Place the Table Top upside down onto a piece of cardboard or another soft surface to protect it during installation. Place the leg assembly onto the Table Top as shown above. Align the pre-drilled holes in the Table Legs with the pilot holes in the Table Top. Use (1) One #12 x 1" Pan Head Screw per hole to secure.


Be sure to tighten all screws and bolts after completing this step.

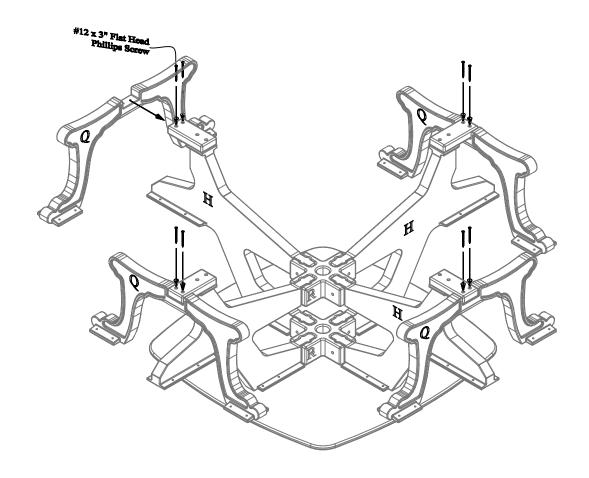

### Step #4:

While the table is upside down, align the pre-drilled holes in the Table Leg to the pilot holes in the Seat Support as shown above. Use (1) One #12  $\times$  3" Flat Head Screw per hole to secure.


Do not tighten screws completely. This will be done in a later step.

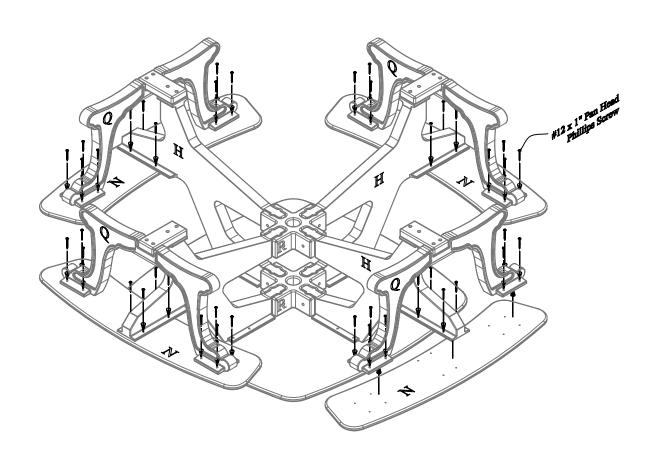

## Step #5:

While the table is upside down, align the pre-drilled holes in the Seat to the pilot holes in the Seat Support and the Table Leg as shown above. Use (1) One #12 x 1" Pan Head Screw per hole to secure.

Be sure to tighten all loose screws after completing this step.

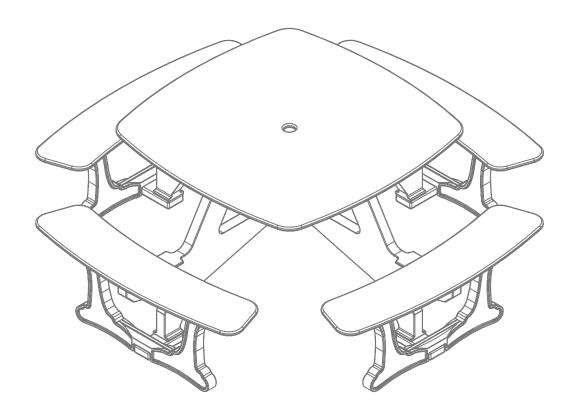

# Step #6:

Turn the table over on to its legs, please use caution for the table weighs approximately 200 pounds.