

Diagram 1: End Casting and Support Tube Assembly

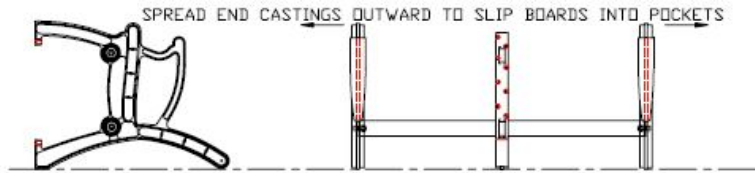


Diagram 3: Placing and Fastening Seat Boards - Section 2 and Attaching Other Support Tubes and Castings

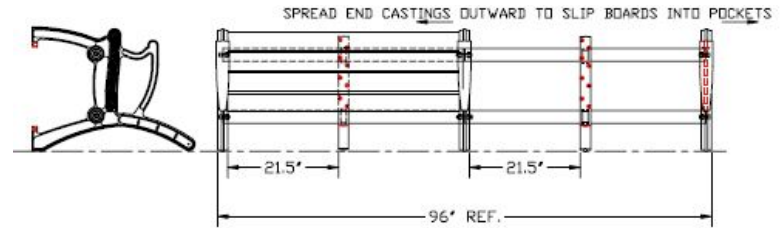


Diagram 4: Placing & Fastening Back Boards in Both Sections - One Section At A Time


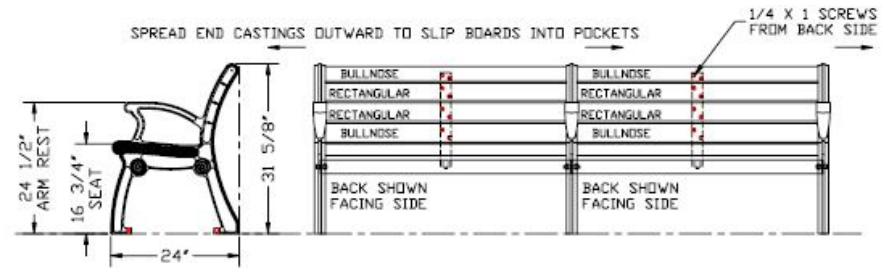


Diagram 2: Placing and Fastening Seat Boards - Section 1

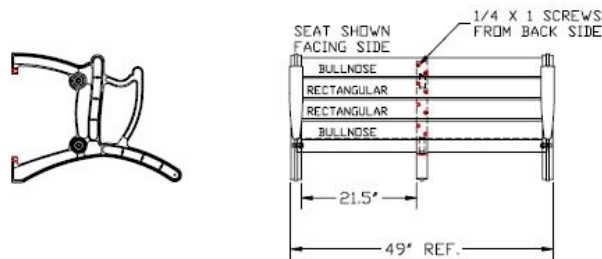

Detail A: Cap Screws & Threaded Rod Attachment


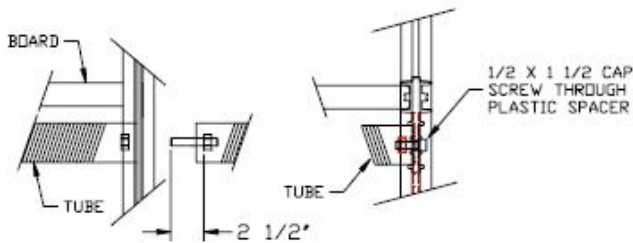


Diagram 5: Surface Mounting Instructions

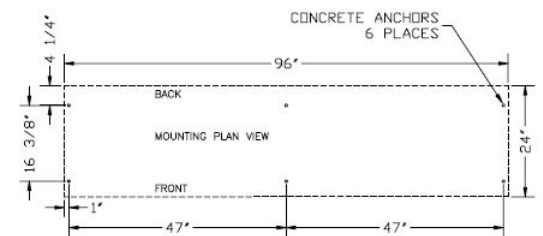

WARRANTY: OCCOutdoors, Inc. guarantees all items for one full year to be free of defects in workmanship or materials when installed and maintained properly. We agree to repair or replace, any items determined to be defective. Items specifically not covered by this warranty include vandalism, manmade or natural disasters, lack of maintenance, normal weathering or wear and tear due to public abuse.

NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. ALL DIMENSIONS ARE CONSIDERED TRUE AND REFLECT MANUFACTURER'S SPECIFICATIONS
3. DO NOT SCALE DRAWING.

This document contains OCC Outdoors Proprietary Information. No intellectual copyright or license is granted by OCC Outdoors in connection with it. It is delivered on the express condition that the document and the information contained in it shall be treated as confidential, shall not be used for and purpose other than that for which it is hereby delivered (the use and maintenance of the product supplied). It shall not be disclosed in whole or part to third parties and shall not be duplicated in any manner without OCC Outdoors's prior approval.

OCC Outdoors Products

PH: 1-800-821-7670

EMAIL - occcontact@occoutdoors.com Fax: 1-317-862-9422

Part #: Ep-Ben-RecyL-8' Emerald Park Plastic Bench with Center Arm Rest

Date: 10/18/2015

1. Unpack and lay out pieces to assemble. Verify that the parts, quantity, and dimensions match those on the enclosed bill of material.
2. Begin by loosely assembling the bench end castings to the back support tube. **See diagram 1.**
3. Lay one 100029 end casting back side down and attach the back support tube 100034. Place the support tube into the back receiving hole of the casting and fasten with a 1/2 x 1 1/2 cap screw through a plastic spacer, through the casting, and into the threaded end of the support tube. **See diagram 1.** Hand snug the cap screw, do not tighten.
4. Lay the second 100029 end casting back side down and attach the back support tube 100034 following the same procedure as step 3.
5. Place the center support 100031 casting(s) at the proper location(s) on the back support tube. Rest support against the tubing. Reference from inside edge of one end casting to inside edge of support casting.
6. 8 foot bench is made of two sections. Section center support at 21 1/2 inches to edge of support. Put one section together at a time.
7. Place a bull nose board (best side facing you) nose down, into the lower pocket of one end casting and then into the lower pocket of the other end casting. Make certain that the support casting(s) behind the board and the radius portion of casting(s) is on the tubing. May need to spread the end castings outward at upper ends in order to get board in between the end casting flanges. This can be accomplished by loosening the cap screws a little. **See diagram 2.**
8. Continue to place boards into one pocket of an end casting and then into the other pocket in the order shown until last board for seat is in place. Keep best side facing out. Keep boards in front of the support casting(s). Make sure that boards center between the lugs on the support casting(s)
9. Install the front support tube 100034 between the two end castings seating the tubing in the radius portion of the support casting(s) and fasten with a 1/2 x 1 1/2 cap screw through a plastic spacer, through the casting, and into the threaded ends of the support tube.
10. Hand snug all cap screws to square up the frame made by the tubing and end castings.
11. Go around to the back and line up the support castings so they are vertical (parallel with end casting) and properly dimensioned.
12. From the back side drill a 5/32 pilot hole approximately 1/2 inch deep and install a 1/4 x 1 screw into the seat boards at each slotted hole in the support casting(s). **See diagram 2.**
13. Remove the cap screws from right side facing end of the bench assembly. Take care not to dislodge the end casting from the boards.
14. Take remaining support tubes 100034 and install 1/2 x 3 1/2 inch threaded rod into the threaded block of the free end of each tube. Turn in until rod length is 2 1/2 inch extended from threaded block. Press locking device over end of threaded rod and seat against welded block inside tube. Rotate rod until locking device is tight.
See detail A. See diagram 3

15. Thread one support tube with rod into the back receiving hole of the loose end casting. Rotate the tube by hand to thread rod into threaded block of the opposite tube. Rotate until the tube is snug against the casting but not tight. Start the remaining tube in the front receiving hole but leave it looser than the back tube. **See diagram 3.**
16. Lay the third 100029 end casting back side down and attach the back support tube 100034. Place the support tubes into the back receiving hole of the casting and fasten with a 1/2 x 1 1/2 cap screw through a plastic spacer, through the casting, and into the threaded end of the support tube. Hand snug the cap screw, do not tighten. Repeat for the front hole but leave this cap screw looser. **See diagram 3.**
17. Center the support casting at 21.5 inches on the support tubes.
18. Place a bull nose board (best side facing you) nose down, into the lower pocket of one end casting and then into the lower pocket of the other end casting. Make certain that the support casting(s) behind the board and the radius portion of casting(s) is on the tubing. May need to spread the end castings outward at upper ends in order to get board in between the end casting flanges. This can be accomplished by loosening the cap screws a little. **See diagram 4.**
19. Continue to place boards into one pocket of an end casting and then into the other pocket in the order shown until last board for seat is in place. Keep best side facing out. Keep boards in front of the support casting. Make sure that boards center between the lugs on the support casting.
20. Rotate the tubing with threaded rod to take up loose slack between the tube and end casting. May need to hold the opposite tube if it wants to rotate. Tighten just enough so there is very little play between the casting and the tubes.
21. Hand snug all outside end cap screws to square up the frame made by the tubing and end castings.
22. Go around to the back and line up the support castings so they are vertical (parallel with end castings) and properly dimensioned.
23. From the back side drill a 5/32 pilot hole approximately 1/2 inch deep and install a 1/4 x 1 screw into the seat boards at each slotted hole in the support casting(s).
24. Set the bench upright to finish the assembly. Begin with one section of the back and place boards into the back pockets. **Follow steps 25-28.** When complete do the next section in same manner. **See diagram 4**
25. Place a bull nose board (best side facing out) nose down, into the lower pocket of one end casting and then into the lower pocket of the other end casting. Make certain that the support casting is behind the board. May need to spread the end castings outward at upper ends in order to get board in between the end casting flanges. This is accomplished by loosening the cap screws and tubing slightly. **See diagram 4.**
26. Continue to place boards into one pocket of an end casting and then into the other pocket in the order shown until last board for back is in place. Keep best side facing out. Keep boards in front of the support casting(s). Make sure that boards center between the lugs on the support casting(s)
27. Tighten the four cap screws to secure the end castings to the support tubes. Make certain that the alignment between the end castings is plumb when tightening so bench doesn't rock.
28. From the back side drill a 5/32 pilot hole approximately 1/2 inch deep and install a 1/4 x 1 screw into the back boards at each slotted hole in the support casting.
29. The bench is now ready for mounting. **Mounting is shown in diagram 5.**

Assembly and Installation Instructions for the center Arm Rest

1. Unpack and lay out pieces in the kit. Verify that the parts, quantity, and color match those on the enclosed bill of material.
2. Begin with the arm casting (100030-X_) and set it upright on the bench, near desired location with the long length facing toward the back of the bench. See diagram 1.
3. Insert the back end of the arm with its lug between the bottom and next lower boards on the back of the bench. See [diagram 1](#)
4. Move the arm so it is at an angle to the back of the bench. Push down on the arm to set the front leg with the lug between the two outer boards on the seat of the bench. See [diagram 1](#).
5. Straighten the arm so it is perpendicular to the back of the bench. Slide the arm into the location desired on the bench. (Usually the arm mounts at a center position between ends.)
6. Place one anchor plate 100083 at back of bench opposite lug of 100030 and install two taper proof screws (71-TP1420134BH) through two lock washers (71-14LW-SS) into the threaded holes of the spacing lug at end of arm. Snug the screws but do not tighten at this time. See [diagram 2](#).
7. Place one anchor plate 100083 under seat of bench opposite lug of 100030 and install two taper proof screws (71-TP1420134BH) through two lock washers (71-14LW-SS) into the threaded holes of the spacing lug at end of arm. Snug the screws but do not tighten at this time. See [diagram 2](#).
8. Make certain the arm is oriented vertically to the seat, perpendicular to the back of the bench, and in location desired. Tighten the four screws. NOTE: Use care when tightening screws to avoid stripping the threads in the cast aluminum spacing lug. See [Diagram 3](#)

Diagram 1 - Locating Arm Rest

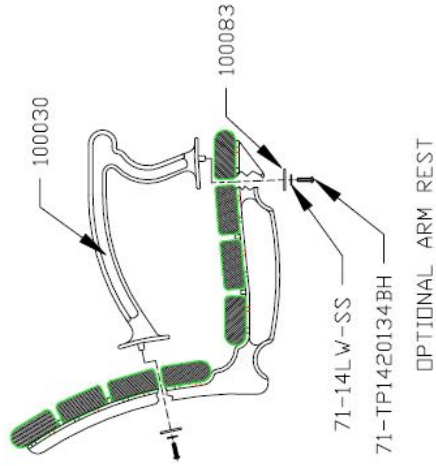


Diagram 2 - Location of Anchor Plates

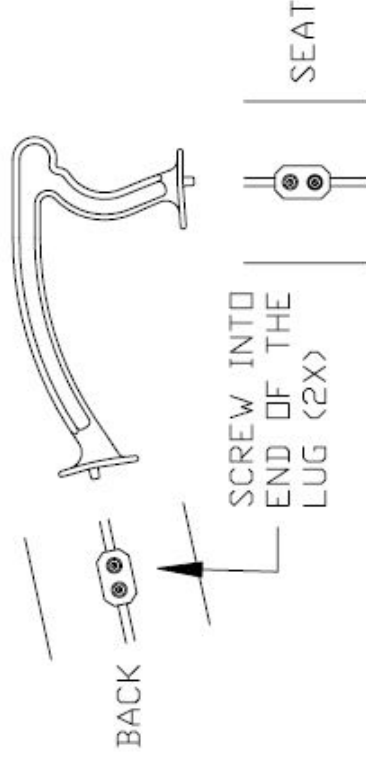


Diagram 3 - Alignment, Frontal View

